


Get Started With Your New IRIS 3000® Digital Video Phone



Keys and Shortcuts

KEY	USE
1. REGISTER	The green LED light is lit when the digital video phone is connected to the IRIS 3000® Digital Phone Service
2. POWER	Indicates if the digital video phone is switched on and the power cord is connected
3. MAIL	Allows you to retrieve voice mail messages
4. HOLD	Enables you to place or remove calls on hold
5. MUTE	Disables voice transmission during call
6. PHONEBOOK	Provides access to your Phonebook
7. CONFERENCE	Allows you to audio conference multiple callers on to one line (3 caller audio conference call)
8. PRIVACY	Disables video transmission during a call or becomes self-view when the phone is not in use
9. *	Enters "*"
10. NUMERIC KEYPAD	Enters numbers or letters
11. #	Enters "#" or rejects incoming call
12. MENU	Activates the Main Menu
13. BACK	Moves to the previous menu, finishes a sequence or deletes characters or letters
14. MY CONTENT	This is a future enhancement of IRIS 3000® Digital Phone Service
15. 	Navigation buttons used to navigate or set values for selected items
16. OK	Use to select or confirm selections
20. STATUS	Lists information needed for technical support such as configuration and software version
21. CAPS	Allows you to capital, lowercase or numeric mode
22. MY APPLICATIONS	This is a future enhancement of IRIS 3000® Digital Video Phone Service
23. REDIAL	Calls the last number dialed
24. SPEAKER	Activates/deactivates the speakerphone
25. CALL	Calls the dialed number

Making a Call

- Pick up handset or press **SPEAKER**
- Enter the phone number
- Press **CALL**

Making a Call from the Call Log Menu

- Scroll to Call Log from the Main Menu and press **OK**
- Select the menu location of the number you wish to call (Total Calls, Answered, Dialed, Missed) and press **OK**
- Scroll to the number and press **OK**
- Scroll to Make A Call and press **OK**

Ending a Call

Hang up handset or press **SPEAKER**

Receiving a Call

When you receive an incoming call, you can view the number and location of caller along with any additional contact information you entered into the enhanced Phonebook. Pick up the handset or press **SPEAKER** to answer the call.

Redialing a Call

To redial the last number dialed, press **REDIAL**. The digital video phone will automatically call the last number dialed.

Rejecting a Call

To reject an incoming call, press **#**. The call will be sent directly to your voice mail.

Volume Control

Control the volume by pressing the Navigation buttons or **MUTE** during a call.



Left Navigation – Lowers the Volume




Right Navigation – Raises the Volume

 


Mute – Disables the voice transmission

To adjust the Speaker Volume when not on a call:

- Scroll to Settings from the Main Menu and press **OK**
- Scroll to System Settings and press **OK**
- Scroll down to Sound and press **OK**
- Scroll down to Speaker Volume and use the  to select the desired Speaker Volume
- Press **BACK** and select **YES** to save your settings

To adjust the Handset Volume when not on a call:

- Scroll to Settings from the Main Menu and press **OK**
- Scroll to System Settings and press **OK**
- Scroll down to Sound and press **OK**
- Scroll down to Handset Volume and use the  to select the desired Handset Volume.
- Press **BACK** and select **YES** to save your settings

Call Waiting

While on the digital video phone, a tone alerts you of another incoming call.

- To accept the incoming call, press **HOLD** (the current call will be placed on hold)
- Once the incoming call is completed, press the **HOLD** button to reconnect to the original caller. To switch between calls, press **HOLD**

Call Conference

- Press **HOLD** during the initial call (the call can be incoming or outgoing). This places the existing caller on hold.
- Dial the number of the third party and press **CALL**. When the third party answers, press **CONFERENCE**.

Digital Photo Frame

To turn your Digital Photo Frame on:

- Scroll to Settings from the Main Menu and press **OK**
- Scroll to System Settings and press **OK**
- Scroll down to Display and press **OK**
- Scroll down to Digital Photo Frame and change settings to On
- Scroll down to Digital Photo Frame Delay and select the desired delay between each photo
- Press **BACK** when finished and select **YES** to save your settings

NOTE: If you are displaying large photo files (more than 3 mega pixels), set the delay to 20 seconds to allow time for each photo to load.

To display your Digital Photos:

- Insert the USB device or SD card into your digital video phone
- Scroll to Digital Photo Frame from the Main Menu and press **OK**
- Scroll to View Another Picture and press **OK**
- Select the device (SD or USB) where the pictures are stored and press **OK**
- Select the directory where the pictures are stored and press **OK**
- Select the first image and press **OK**
- The images will begin to appear with a set delay in between each picture. Press **BACK** until you reach the Main Menu Self-View. If you are not on a call, you can press **PRIVACY** to see what your callers will see when they call.

Listening to Your Voice Mail

An envelope icon will appear in the bottom right-hand corner of your screen to indicate you have voice mail and the number of messages waiting.

To listen to your voice mail messages:

- Press **MAIL**
- Enter your 4-digit PIN and press **#**
- After announcing the number of new messages, the messages will automatically begin to play

Voice Mail Functions

Press	Command
1	Save message
2	Replay message
3	Delete message
4	Forward message
6	Play message envelope information
9	Hear user options
*Key	Exit voice mail

For more information on your IRIS 3000® Digital Video Phone, please refer to the User Manual located on www.wgatesupport.com.