

Call Conference

During a call (incoming or outgoing)

1. Press **3** to place the existing caller on hold
2. You will see the caller screen at the left placed on hold and the on-screen hold indicator icon will turn blue **||**
3. Enter the number of the third party you wish to call and press **3** or select Dial (Middle Soft Key)
4. Once the third party answers, press **3** and the on-screen conference indicator light will turn blue

Playing a Slideshow

1. From the Home screen, select **Options** (Left Soft Key)
2. Press **▼** to highlight Play Slideshow
3. Press **OK** or select **Select** (Middle Soft Key)

The slideshow will continue to loop through your photos. Press any key to stop the slideshow from running.

Note: Your phone comes with images already loaded so you can preview this feature.

Digital Photo Frame

To turn on the digital photo frame:

1. Select **Menu** (Middle Soft Key)
2. Press **▶** and **▼** to highlight the Digital Photo Frame icon
3. Press **OK** or select **Select** (Middle Soft Key)
4. Press **▶** to select **Settings** tab

The **Overview** tab provides access to view and manage your local (pre-loaded) and

USB (self-loaded) images.

The **Settings** tab allows you to change options using **▲▼◀▶** scroll to the options you would like to change and press **OK**.

From the Digital Photo Frame Menu Settings Tab:

To use the pre-loaded photos:

1. Press **▼** to highlight Use Local Pictures
2. Press **OK** to place a check mark in the check box (if it is not already selected)
3. Press **▼** to highlight Play as screensaver
4. Press **OK** to place a check mark in the check box (if it is not already selected)

To use photos loaded on a Flash Drive:

1. Insert the Flash Drive device into the USB port on the back of your phone
2. USB Inserted Menu will display on the screen
3. Press **▼** to highlight Configure Slideshow
4. Press **▼** to highlight Use USB Pictures
5. Press **OK** to place a check mark in the check box (if it is not already selected)
6. Press **▼** to highlight Play as screensaver
7. Press **OK** to check or uncheck the box

To use both pre-loaded photos and your Flash Drive photos:

1. Press **OK** to place a check mark in the check box Use Local Pictures and Use USB Pictures (if it is not already selected)
2. Press **▼** to highlight Play as screensaver

3. Press **OK** to check or uncheck the box

To Choose Categories of pictures to be displayed or not displayed:

1. Press **▼** to highlight the Choose Categories option
2. Press **OK**
3. Press **OK** to check or uncheck the box of each category to be included in your photo frame slideshow

In the Digital Photo Frame Menu, you can configure settings such as: picture slide display time, continuous loop or display names.

Self View

If you are not on a call:

1. From the Home screen, select **Options** (Left Soft Key)
2. Press **▼** to highlight Preview
3. Press **OK**
4. To turn off self view: select **Hide Preview** (Left Soft Key)

While on a call:

1. Select **Preview** (Left Soft Key)
2. To turn off self view select **Hide Preview** (Left Soft Key)

Voice & Video Mail

On the Home screen, an envelope icon is displayed at the bottom right of screen with the number of messages (New, Urgent and Saved) in your Voice & Video mailbox.

Playing Voice & Video Mail Messages

4. From the Home screen select **Mail** (Right Soft Key)
5. Enter your 4-digit PIN followed by the # key (Your mailbox default PIN is set to 1234)
6. The voice prompt will guide you through your mailbox options and message(s); indicating if it is a voice or video message.

Mailbox Functions

Press	Command
#	Save message
2	Replay message
3	Delete message
4	Forward message
6	Play message envelope information
9	Hear user options
*	Exit mailbox

ojo.Vision

Quick Reference Guide



Let's Connect


ojosupport.com

Shortcuts

Activity	Shortcut
Redial	Press to display Call History. Press again to dial last incoming call or outgoing number or use the navigation arrows to scroll through the options and select a number, then press OK .
Contacts	Press and hold to access your Contacts

Soft Keys:

The Ojo Vision has three Soft Keys: Left, Middle and Right. They are located directly below the screen and above the navigation arrows.

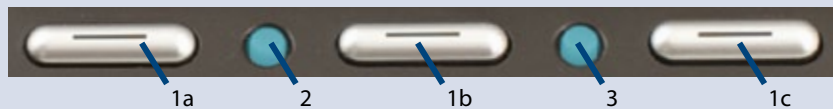

1a	Left Soft Key	Soft Keys enable various functions (Accept Incoming Call & Send to Mail) depending on the options available within a particular Menu/Screen. The function that corresponds with the Soft Key will appear directly above the Soft Key on the screen.
1b	Middle Soft Key	
1c	Right Soft Key	
2	Power & Register	The left LED blue light is flashing when the video phone has power and is steady when registered.
3	Message Indicator	The right LED blue light is off when there are no messages, on when there are only saved messages and flashing when there are new messages

Home Screen Soft Keys

Options (Left Soft Key)	Displays selections including Play Slideshow, Preview, Use External Video Display and Help
Menu (Middle Soft Key)	Displays selections including Contacts, Call History, Settings, Video/Voice Mail, Digital Photo Frame and Information
Mail (Right Soft Key)	Accesses your mailbox



Hold		Call	
Conference		End	
Up Arrow		Mute	
Down Arrow		Privacy	
Left Arrow		Speaker-phone	
Right Arrow			

Keys & Buttons

1	Hold	Enables you to place or remove calls on hold	8	Call	Calls the number dialed or selected and answers an incoming call
2	Conference	Allows you to audio conference multiple callers (three-way conference call)	9	End	Ends a call, cancels changes and displays Home screen
3	Up Arrow	Navigates up	10	Alpha-numeric Keypad	Enters numbers, letters or characters
4	Down Arrow	Navigates down	11	Mute	Disables voice transmission during a call
5	Left Arrow	Navigates left	12	Privacy	Disables video transmission during a call
6	Right Arrow	Navigates right	13	Speaker-phone	Activates/deactivates the speakerphone
7	OK	Selects or confirms sections or options			

Making a Call

1. Pick up handset or press
2. Dial phone number
3. Press OK, press or select Dial (Middle Soft Key)

Making a Call from Call History

1. Press to display Call History screen or select **Menu** (Middle Soft Key) and press to highlight Call History icon and press **OK**
2. Select a phone number by scrolling through the list using
3. Press **OK**, press or select **Dial** (Middle Soft Key)

Making a Call from Contacts

1. Press and hold to display Contacts or select **Menu** (Middle Soft Key)
2. Select a phone number by scrolling through the list
3. Press **OK**, press or select **Dial** (Middle Soft Key)

Ending a Call

- Hang up the handset, press or press

Receiving a Call

When you receive an incoming call the number and location of the caller and any additional contact information saved in your Phonebook for that number will appear on the LCD screen.

To answer a call:

- Pick up the handset
- Press
- Press **OK**, press or **Answer** (Middle Soft Key)

Rejecting a Call

- Press or select Send to Voice Mail (Right Soft Key). The caller will be sent to your mailbox.

Adjusting Volume

- While on a call use to adjust the volume.

Call Waiting

A tone and an on-screen message will alert you of another incoming call while you are currently on another call. You can choose one of the following options:

- *Accept incoming call and end current call:* select **End & Answer** (Left Soft Key)
- *Accept incoming call and place current call on hold:* select **Hold & Answer** (Middle Soft Key)
- Once a call is answered: select **Flash** (Right Soft Key) to switch between calls
- To disconnect only one call: Hang up the handset.
- *Reject incoming call:* select **Send to Mail** (Right Soft Key)